Amzer® Swivelling Air Vent Mount

⚠ Use caution when installing and removing the vent mount and adjusting the swivel movement to avoid damaging your air vents.

Assemly (if necessary)

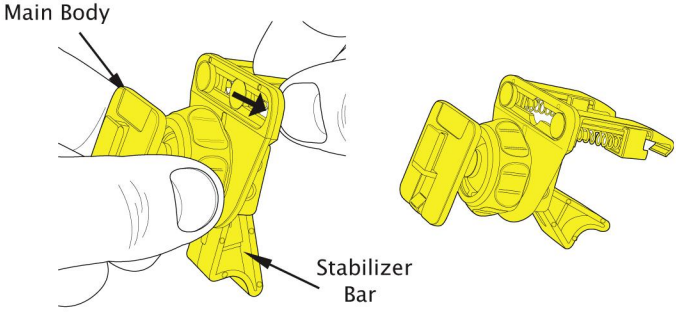

Insert the round end of the spring vent clip into the hole in the middle of the horizontal gap in the Main Body. Slide the Spring Vent Clip to one side and repeat with the other Clip on the other side.

Vent Mount Installation

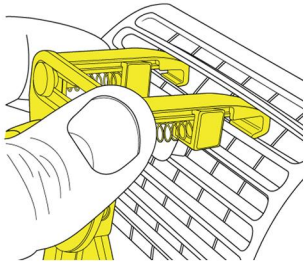

Pull back on the spring slides to fully retract both springs on the Vent Clip. While retracted, insert the Vent Clip into the vent and hool it around the back side of the slats. Release the slides to secure.

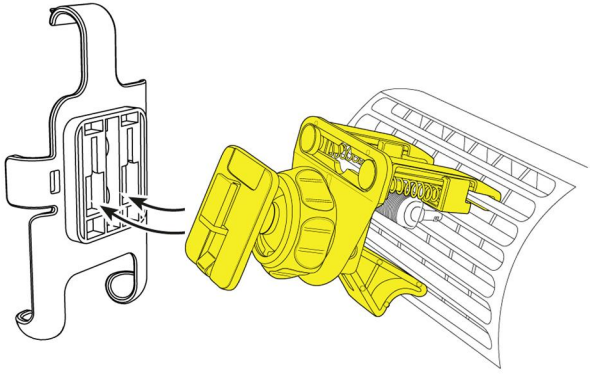

Rest the stabilizer bar on the lip of the dash or bottom of the air vent to prevent movement or sagging. Secure the rear of the phone holder onto the main body of the Vent Mount.

⚠ Do not install Amzer® products within the airbag deployment zone. Do not install Amzer® products where driver view or visibility are obstructed. Follow all manufacturer safety guidleines when operating your device.